


ISO MODELS WITH PANELS ASSEMBLY INSTRUCTIONS

Hardware Included (quantity varies per configuration):

[A] 1/4-20 x 1.25" countersink screw with washer (17)

[B] 1/4-20 x .75" flat head binding bolt (12)

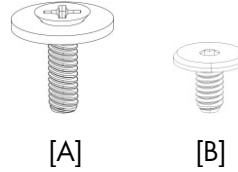


IMPORTANT – HARDWARE IS SPECIFIC FOR THE ASSEMBLY OF EACH COMPONENT. MAKE SURE THE CORRECT ITEMS ARE USED AS DIRECTED AND IDENTIFIED BELOW.

****UNIT REQUIRES TWO PEOPLE FOR INSTALLATION****

Step 1: Locate the T-nut holes for the panels on the back and sides of the unit. There should be six locations on the back, six on the cubby side and five on the non-cubby side. (Figure A).

FIGURE A

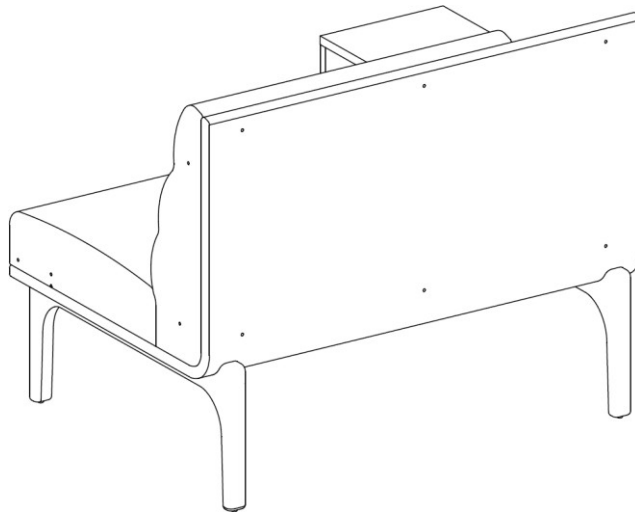

continued on next page

- Step 2: Attach the back and side panels to the unit with (11) $\frac{1}{4}$ -20 x 1.25" countersink screws and washers [A]. There are (6) $\frac{1}{4}$ -20 x 1.25" countersink screws and washers [A] on the back panel and cubby side panel, and (5) $\frac{1}{4}$ -20 x 1.25" countersink screw and washers [A] on the non-cubby side. (Figure B).
- Step 3: Attach (2) corner brackets with (12) $\frac{1}{4}$ -20 x .75" flat head binding bolts [B] to the back and side panels. There are (6) $\frac{1}{4}$ -20 x .75" flat head binding bolts [B] per bracket (Figure C).

FIGURE B



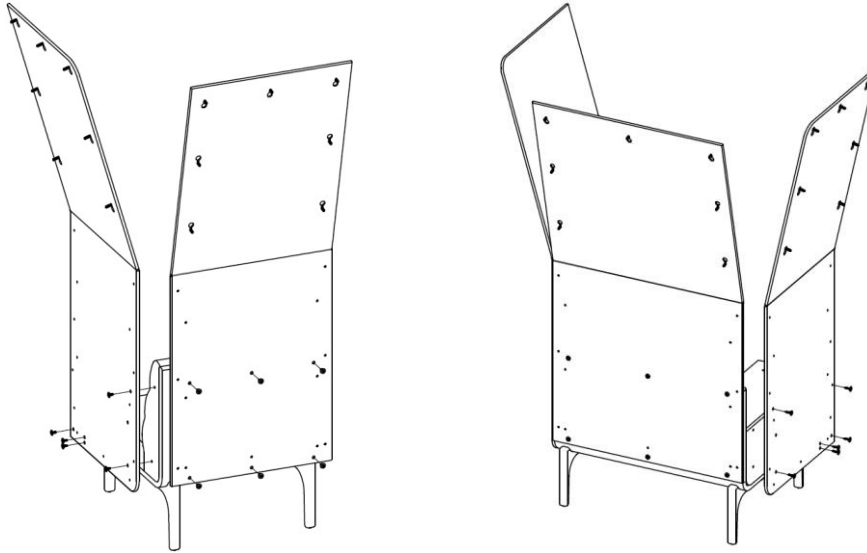


FIGURE C

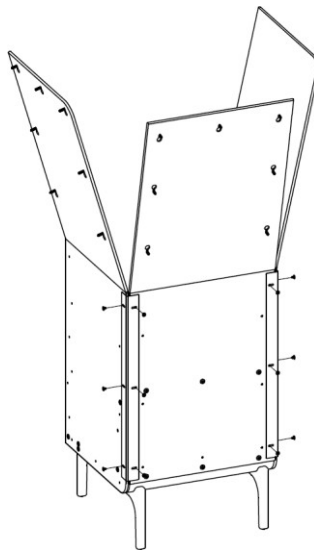

Step 4: Close and secure the panels down. (Figure D).

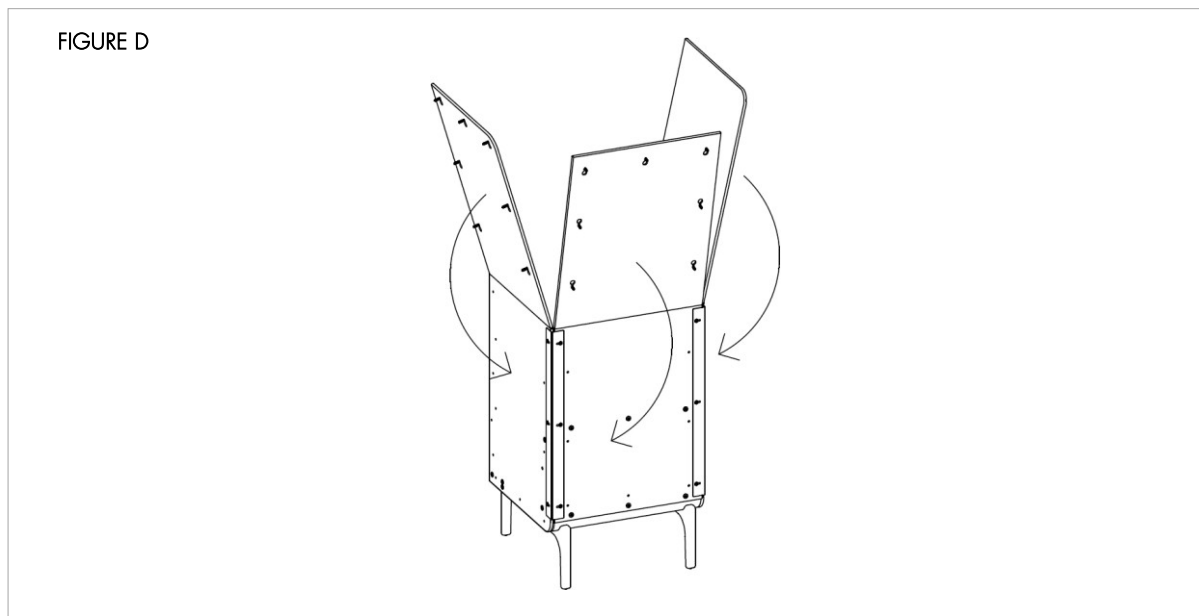

If you require additional assistance, please contact Arcadia Client Services at 800.585.5957