

SCENERY WOOD BRIDGE INSTALLATION

Step 1: Ensure your layout is ganged together before attaching wood bridge.

Step 2: Line up holes on the bridge brackets with the holes underneath the seating unit ledge (Figure A).

Step 3: With each bracket in place, screw in four (4) ¼-20 machine screws per bracket (Figure B). Please note that the wood bridge will be approximately ¼" lower than upholstered ledge (not intended to be flush).

FIGURE A


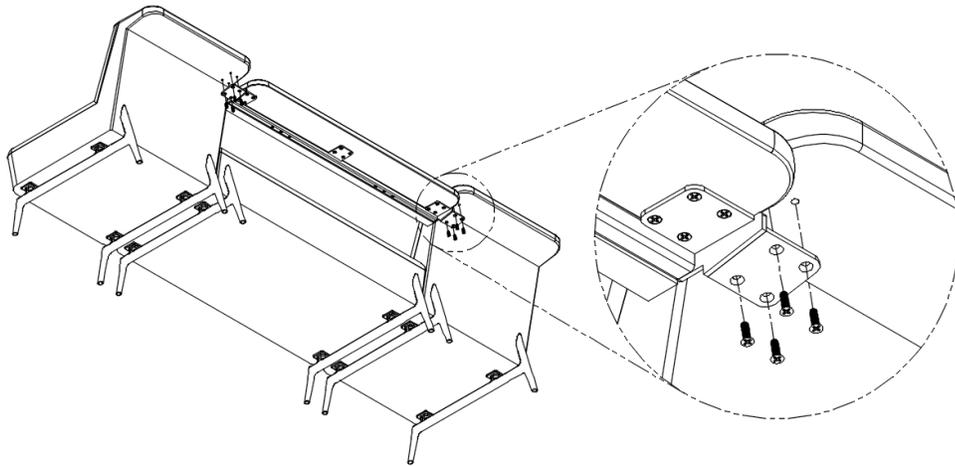


FIGURE B

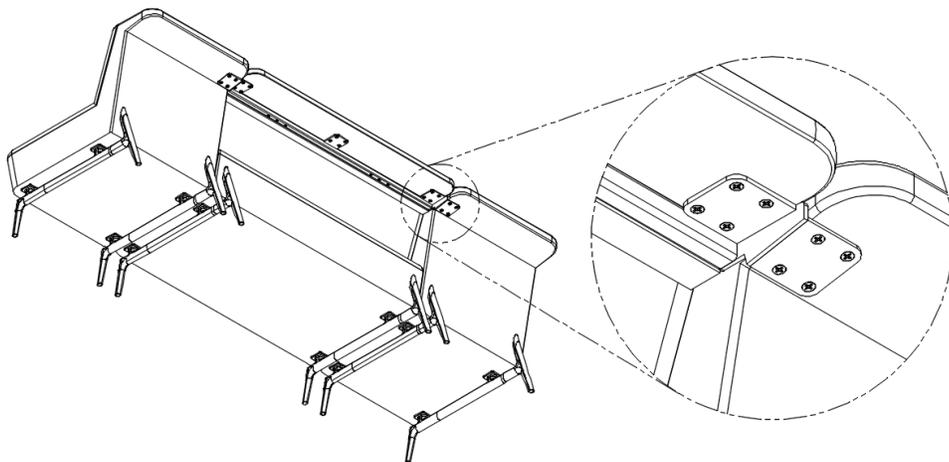

If you require additional assistance, please contact Arcadia Client Services at 800.585.5957.