


DOMO PRIVACY PANEL INSTALLATION

Align the z-brackets on the panels with the z-brackets on the back of the sofa. Apply downward force until all brackets (12 total) are connected and privacy panel is firmly adhered to the seating unit (Figure A).

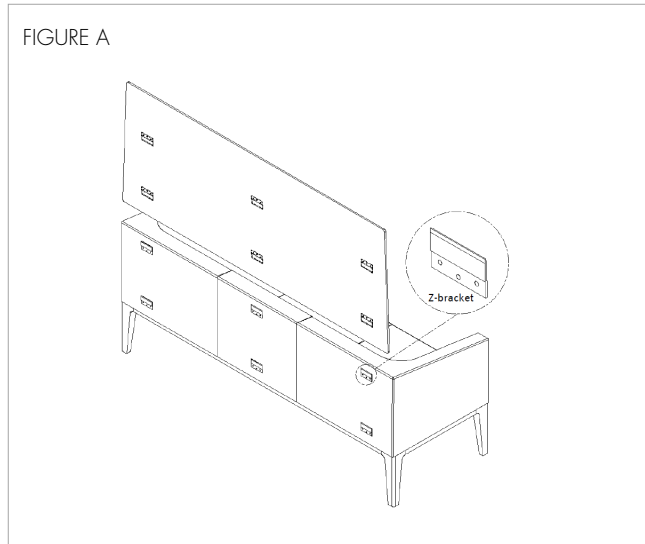

If you require additional assistance, please contact Arcadia Client Services at 800.585.5957.